



Star Machine
7810 Oak Avenue
Parkville, MD. 21234
Phone: 667.210.3874
Fax: 410.661.2467

VACUUM REGULATOR INSTRUCTIONS

ADJUSTING THE REGULATOR SET POINT

The regulator is infinitely adjustable and does not require disassembly to change the setting. Loosen the hex jam nut. Increase vacuum by turning the regulator in (clockwise). Decrease vacuum by turning the regulator out (counterclockwise). Retighten the jam nut.